

Test Prints

Usage Report Page 2 Information Page 3 NVM Contents Page 5




Usage Report Page

The Usage Report Page contains the following information:

- Printer Model Name.
- Printer Model Number.
- Printer Serial Number.
- Date of last print job received.
- Total ink consumed.
- Date of first print job received.
- Number of pages printed (media size/media type/print quality setting).

To print the Usage Report Page, hold the power button down and press the resume button once.

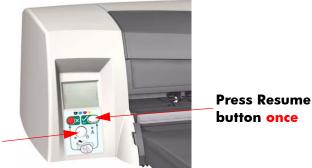

Hold Power Button

Sample of the **Usage Report Page**

Total Pages Printed Total Jobs: 21




Information Page

The Information Page contains the following information:

- Printer Indentification.
- Printer Status.
- Printer Usage.
- Printer Errors and Warnings.
- Ink Consumables Status.
- Ink Consumables Usage.
- Network Card Information.

To print the Information Page, hold the power button down and press the resume button **4 times**.

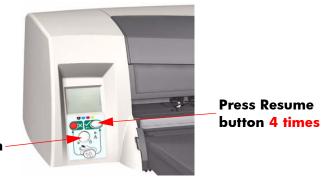

Hold Power Button

Sample of the Information Page (page 1 of 3)



Sample of the **Information Page** (page 2 of 3)

```
| TIRK COTBOURBALE | SOLITION | TOTAL | THE NO. 11 | Y = HP No
    Ink Consumable Status Section

Prinhead Status : K = Inserted C = Inserted M = Inserted
Scan Akis Shutdown : K = Yes C = Yes C = Yes Cartridge Status : K = Inserted C = Inserted M = Inserted
                                                                                                                                                                                                                                                                                                                                          Y = Inserted
Y = Yes
Y = Inserted
                                                                                                                                                                                                                                                            M = Yes
M = Inserted
```

Ink Consumable Identification Section

Sample of the **Information Page** (page 3 of 3)

```
I/O Section
----- HP JetDirect Configuration -----
Status: I/O Card Ready
                                                                                                                           ----- IPX/SPX -----
                                                                                                                     Status:

        Status:
        I/O Card Ready

        Model Number:
        J6857A

        Handware Address:
        0001E68525EC

        Firmware Version:
        R.22.03

        Port Config:
        108ASE-T HALF

        Auto Negotiation:
        0n

        Manufacturing ID:
        22814159982201

        Date Manufactured:
        12/2001

                                                                                                                                                                               Auto Select
                                                                                                                    Primary Frame Type:

        Network
        Frame Type
        Rcvd

        Unknown
        EN.II
        27

        00000001
        EN.882.2
        886

        Unknown
        EN.802.3
        1

                                                                                                                    Status: 16
NOT CONFIGURED NPI5E25EC
 Admin Password: Not Specified SSL/TLS: Not Specified Disabled Cert Expires: Not Applicable SNMP Versions: 1;2 SNMP Set Chty Name: Not Specified Access List: Not Specified
                                                                                                                                                                                Queue Server
                                                                                                              NDS Context:
 Attached Server:
SAP Interval:
                                                                                                                     ----- TCP/IP -----

        Status:
        Ready

        Name:
        C CAD1

        Zone:
        ICD-R&D

        Type 1:
        LaserWhiter

        Type 2:
        DeskWhiter

        Network Number:
        1500

        Node Nuwber:
        104

  Status:
```




NVM Contents Page

The NVM Contents Page contains the following information:

- EEROM values dump containing all the values stored in the EEROM (Calibration, etc.)
- Printheads Acumen dump
- Cartridges Acumen dump.

To print the NVM Contents Page, hold the power button down and press the cancel button **once** and the resume button **twice**.

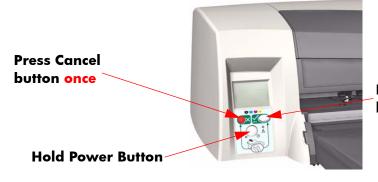

Press Resume button twice

Sample of the NVM Contents Page (page 1 of 3)



	Printheads Acumen Dump
Sample of the NVM Contents Page (page 2 of 3)	Ph Acumen K: 80: 8c 10 42 34 25 88 88 28 4e 88 88 88 88 88 88 88 10: 8b ff c3 2a 15 21 38 64 44 21 56 8f a5 16 28 7b 20: d4 73 73 36 76 90 80 80 81 d6 88 b5 80 fe 27 80 30: 94 80 80 80 80 80 80 6d 53 46 a1 30 40 7c 19 80 88 40: ca 80 c6 ff 80 80 80 80 80
	Ph Acumen C: 00: 09 11 02 34 25 00 00 20 4e 00 00 00 00 00 00 00 10: 05 ff c3 2a 15 20 95 70 44 21 56 81 e5 96 28 75 20: d4 73 76 23 76 00 00 00 1d 00 09 55 00 fe 27 00 30: 35 00 00 00 00 00 00 00 1d 00 00 7c 19 cf 38 40: ca 00 15 ff 00 00 00 00
	Ph Acumen M: 60: 8a 12 82 34 25 86 80 28 4e 06 80 80 80 80 80 80 10: 85 ff c4 2a 15 2c 55 d0 44 21 66 84 66 96 28 75 20: d4 73 75 83 f6 08 60 80 1d 00 69 91 80 fe 27 80 30: 2d 80 80 88 80 80 6d 52 86 al 30 48 7c 19 cf 38 40: ca 80 f6 ff 60 80 80 80
	Ph Acumen V: 88: 8b 13 82 34 2b 80 80 20 4e 86 86 86 86 88 88 88 18: 8b ff c3 2a 15 20 a6 90 44 21 66 7a a4 96 28 7b 20: 44 73 86 53 f6 80 80 80 1d 80 85 80 fe 27 80 36: 48 80 80 80 80 80 6d 52 e6 al 30 40 7c 19 cf 38 40: ca 80 32 ff 80 80 80 80
	Cartridges Acumen Dump
	Cart Acumen K: 88: 88 80 42 34 2c 88 83 80 80 80 80 80 80 4f aa 5d 33 18: 97 2a 65 cc 8b ff c4 29 15 dl 83 21 89 cl 33 12 28: 14 34 39 80 80 80 80 80 80 26 80 6l 40 80 80 80 1f 38: ff cb 83 80 89 89 a0 43 2a 41 80 80 80 80 80 40: 80 80 80 be ff 80 80 80 80
Sample of the NVM Contents Page (page 3 of 3)	Cart Acumen C: 08: 06 81 02 34 2c 00 07 00 00 00 00 00 4f aa 5d 33 10: 97 2a 65 cc 0b ff e8 20 15 ab d5 b5 08 81 33 07 20: 64 34 39 00 00 00 00 00 26 00 45 10 00 00 00 1f 30: ff c9 03 00 09 b5 ad 43 c8 1a 00 00 00 00 00 00 40: 00 00 3d ff 60 00 00 00
	Cart Acumen N: 86: 86: 87: 86: 87: 86: 86: 86: 86: 86: 86: 87: 86: 86: 86: 86: 87: 87: 87: 87: 87: 87: 87: 87: 87: 87
	Cart Acumen V: 80: 86 83 82 34 2c 80 01 00 00 80 80 80 90 4f aa 5d 33 10: 97 2a 65 cc 8b ff e8 20 15 53 e0 f9 84 81 33 12 20: 14 34 39 00 00 00 00 00 26 80 61 20 00 00 00 1f 30: ff cb 03 00 09 b9 a0 43 94 e4 00 00 00 00 00 00 40: 80 80 41 ff 80 00 90 00