




Test Prints

Usage Report Page

The Usage Report Page contains the following information:

- Printer Model Name.
 - Printer Model Number.
 - Printer Serial Number.
 - Date of last print job received.
 - Total ink consumed.
 - Date of first print job received.
 - Number of pages printer (media size/media type/print quality setting).

To print the Usage Report Page, hold the power button down and press the resume button **once**.

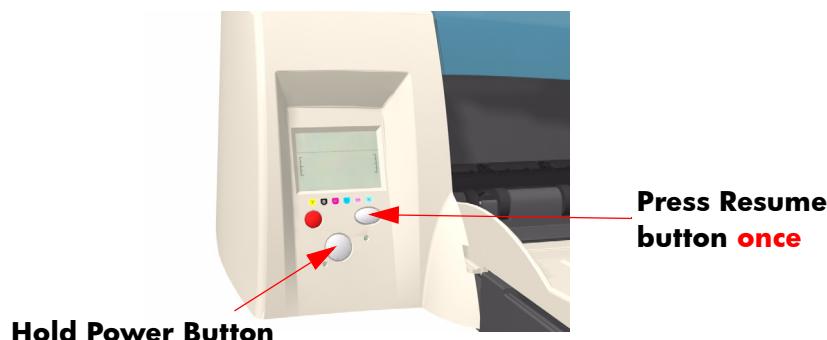


Sample of the Usage Report Page

Information Page

The Information Page contains the following information:

- Printer Identification.
- Printer Status.
- Printer Usage.
- Ink Consumable Identification.
- Ink Consumables Status.
- Ink Consumables Usage.
- Network Card Information.

To print the Information Page, hold the power button down and press the resume button **4 times**.

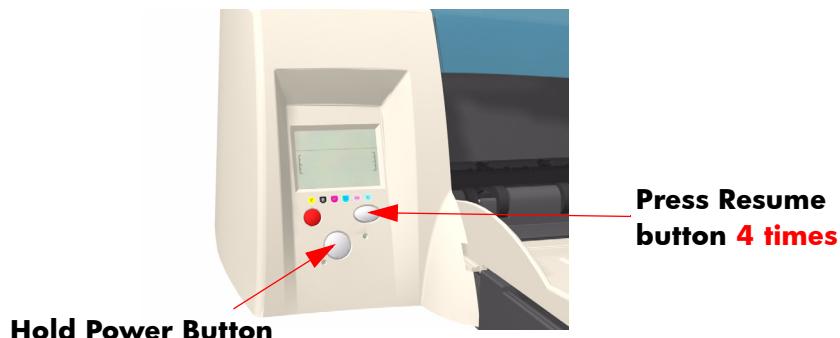

**Sample of the
Information Page
(page 1 of 3)**

INFORMATION PAGE	
Printer Identification Section	
Printer model name=hp designjet 10ps Printer model number=C7790A Printer serial number=SG7CUL7ZMC00 Firmware release=alfa Service Id=1235 Type Eeprom+Flash Tray/2 Present=No Duplexer Present=No Num I/O cards present=1	
Printer Status Section	
Date= UNKNOWN Printer Status=OK Printer Latest Errors: #0 ErrorCode:7984 FilenamelntheadPhys.c Line:114 Date:5-17-2001 Page Count:151 #1 ErrorCode:7984 FilenamelnheadPhys.c Lines:2681 Date:5-17-2001 Page Count:151 #2 ErrorCode:7984 FilenamelntheadPhys.c Line:114 Date:5-17-2001 Page Count:147 #3 ErrorCode:7984 FilenamelnheadPhys.c Line:2681 Date:5-17-2001 Page Count:147 #4 ErrorCode:7984 FilenamelntheadPhys.c Line:114 Date:5-17-2001 Page Count:146 #5 ErrorCode:7984 FilenamelnheadPhys.c Line:2681 Date:5-17-2001 Page Count:146 #6 ErrorCode:7984 Filenamelpm/RedPPM.c Line:372 Date:UNKNOWN Page Count:109 #7 ErrorCode:7984 FilenamelventMonitor.c Line:192 Date:UNKNOWN Page Count:101 #8 ErrorCode:7984 FilenameredSP/RedSP.c Line:4422 Date:7-25-2002 Page Count:79 #9 ErrorCode:7984 FilenamelventMonitor.c Line:192 Date:UNKNOWN Page Count:56 Printer Latest Warnings:NOT IMPLEMENTED Printhead Alignment=Yes Latest Print Jobs: #0 "INFOR PAGE" PMode:plain.normal #1 "INFOR PAGE 2" PMode:plain.normal #2 "INFOR PAGE" PMode:plain.normal #3 "todoblock.jpg" PMode:plain.best #4 "todocyan.jpg" PMode:plain.best #5 "USAGE REPORT" PMode:plain.normal #6 "PAGENUM 6" PMode:plain.normal #7 "PAGENUM 5" PMode:plain.normal #8 "PAGENUM 4" PMode:plain.normal #9 "PAGENUM 3" PMode:plain.normal	
Printer Usage Section	
Total Ink Consumed: K=0 cc C=0 cc M=0 cc Y=0 cc LC=0 cc LM=0 cc Printheads used by color:K=1 C=1 M=1 Y=1 LC=1 LM=1 Total Page Count=187 Scan Axis Usage: 0% Paper Axis Usage: 0% Service Station Usage: 0% Carriage Usage: 0% Tube Usage: 0%	

**Sample of the
Information Page
(page 2 of 3)**

Ink Consumable Identification Section					
Printhead Information					
Model Name:	K=HP No. 84	C=HP No. 11	M=HP No. 11	V=HP No. 11	LC=HP No. 84
Serial Number:	K=01-01-0543768	C=01-01-0532952	M=01-01-0732532	V=01-01-0534948	LC=01-01-0787223
Out of Warranty Date:	K=7-15-2002 C=7-15-2002 M=7-22-2002 V=7-15-2002 LC=7-1-2002 LM=7-1-2002				
Cartridge Information					
Model Name:	K=HP No. 84	C=HP No. 11	M=HP No. 11	V=HP No. 82	LC=HP No. 84
Serial Number:	K=64-02-3432648	C=64-02-2815341	M=64-02-1252464	V=66-01-1374270	LC=64-02-2264597
Expiration Date:	K=UNKNOWN C=UNKNOWN M=UNKNOWN V=UNKNOWN LC=UNKNOWN LM=UNKNOWN				

Ink Consumable Status Section					
Printhead Status:	K=Inserted - 0000	C=Inserted - 0000	M=Inserted - 0000	V=Inserted - 0000	LC=Inserted - 0000
Scan Axis Shutdown:	K=Yes	C=Yes	M=Yes	V=Yes	LC=Yes
Cartridge Status :	K=Inserted - 0000	C=Inserted - 0000	M=Inserted - 0000	V=Inserted - 0000	LC=Inserted - 0000

Ink Consumable Usage Section					
Ink Consumed Printhead:	K: 11 cc (2 %)	C: 4 cc (2 %)	M: 3 cc (1 %)	V: 5 cc (2 %)	LC: 5 cc (2 %)
Usage Time Printhead:	K=0 days C=0 days M=0 days V=0 days	LC=0 days	LM=0 days		
Ink Consumed Cartridges:	K: 19 cc (26 %)	C: 12 cc (41 %)	M: 12 cc (41 %)	V: 12 cc (18 %)	LC: 8 cc (11 %)
Printhead history:	LM: 8 cc (12 %)				
K:	#1 - Inserted - 10 cc (1%) -	0 days - Max. Recovery Level 0			
C:	#1 - Inserted - 4 cc (2%) -	0 days - Max. Recovery Level 0			
M:	#1 - Inserted - 3 cc (1%) -	0 days - Max. Recovery Level 0			
V:	#1 - Inserted - 4 cc (2%) -	0 days - Max. Recovery Level 0			
LC:	#1 - Inserted - 5 cc (2%) -	0 days - Max. Recovery Level 0			
LM:	#1 - Inserted - 4 cc (2%) -	0 days - Max. Recovery Level 0			

**Sample of the
Information Page
(page 3 of 3)**


I/O Section					
HP JetDirect Configuration			Port Config:		
Status:	I/O Card Ready	Port Select:	10BASE-T HALF		
Model Number:	J4169A		Auto Negotiation:	On	
Hardware Address:	0001E62B0C30		Manufacturing ID:	4044044982987	
Firmware Version:	L.28.24		Date Manufactured:	11/2000	
	RJ45		SNMP Set Cmdy Name:	Not Specified	
Network Statistics					
Total Packets Received:	6387		Total Packets Transmitted:	381	
Unicast Packets Received:	385		Unsendable Packets:	0	
Bad Packets Received:	0		Transmit Collisions:	32	
Framing Errors Received:	0		Transmit Late Collisions:	0	
Protocol Information					
----- TCP/IP -----					
Status:	Ready		Status:	16	
Host Name:	eiffel0493		Node Name:	NPI280C30	
IP Address:	15.190.10.86		Network Node:	Queue Server	
Subnet Mask:	255.255.248.0		NDS Tree Name:		
Default Gateway:	15.190.0.1		NDS Context:		
Config By:	BOOTP		Attached Server:		
BOOTP Server:	15.190.4.222		Queue Poll Interval:	2 sec	
TFTP Server:	Not Specified		SAP Interval:	60 sec	
Config File:	Not Specified				
Domain Name:	Not Specified				
DNS Server:	Not Specified				
WINS Server:	Not Specified				
Syslog Server:	Not Specified				
Idle Timeout:	270 sec				
SLP:	Enabled				
Access List:	Not Specified				
Web JetAdmin URL:	Not Specified				
----- AppleTalk -----					
Status:	Ready		Name:	hp designjet 10ps4	
Primary Frame Type:	Auto Select		Zone:	ICD-RD	
Network Frame Type:	Rxdv	21	Type 1:	LaserWriter	
Unknown ENL11	1249		Type 2:	DeskWriter	
00000001 ENL802.2			Network Number:	1588	
			Node Number:	224	
----- DLC/LLC -----					
Status:	Ready				

NVM Contents Page

The NVM Contents Page contains the following information:

- EEROM values dump containing all the values stored in the EEROM (Calibration, etc.)
 - Printheads Acumen dump
 - Cartridges Acumen dump.

To print the NVM Contents Page, hold the power button down and press the cancel button **once** and the resume button **twice**.

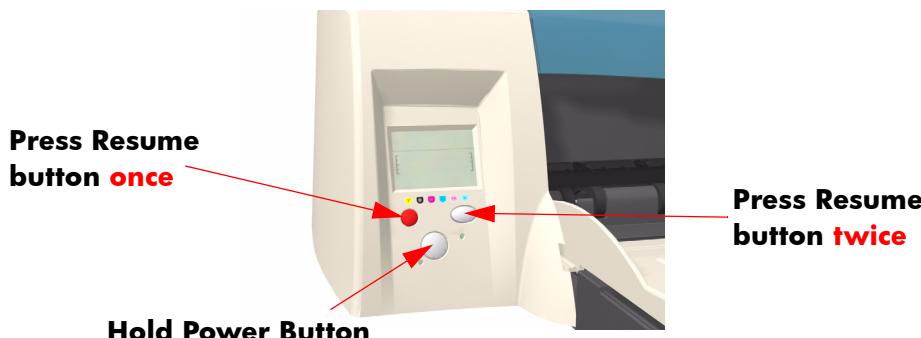

Sample of the NVM Contents Page (page 1 of 3)

**Sample of the
NVM Contents Page
(page 2 of 3)**

Printheads Acumen Dump	
Ph Acumen K:	00: dc 19 42 34 2b 00 00 20 4e 00 00 00 00 00 00 10: 0b ff c3 2a 15 21 30 64 44 21 66 8f 55 16 20 7b 20: d4 73 74 36 76 00 00 00 1d 00 00 b9 00 fe 27 00 30: 9d 00 00 00 00 00 6d 53 46 a1 30 40 7c 19 00 00 40: ca 00 c8 ff 00 00 00 00
Ph Acumen C:	00: 09 11 02 34 2b 00 00 20 4e 00 00 00 00 00 00 10: 0b ff c3 2a 15 20 95 70 44 21 66 81 a5 96 28 7b 20: d4 73 76 23 76 00 00 00 1d 00 00 b9 00 fe 27 00 30: 3b 00 00 00 00 00 6d 52 66 a1 30 40 7c 19 cf 38 40: ca 00 1b ff 00 00 00 00
Ph Acumen M:	00: 0a 12 02 34 2b 00 00 20 4e 00 00 00 00 00 00 10: 0b ff c4 2a 15 2c b5 d0 44 21 66 84 66 96 28 7b 20: 04 73 76 03 f6 00 00 00 1d 00 00 91 00 fe 27 00 30: 2d 00 00 00 00 00 6d 52 85 a1 30 40 7c 19 cf 38 40: ca 00 f6 ff 00 00 00 00
Ph Acumen V:	00: 0b 13 02 34 2b 00 00 20 4e 00 00 00 00 00 00 10: 0b ff c3 2a 15 29 0b 44 21 66 7a a4 96 28 7b 20: 04 73 86 53 f6 00 00 00 1d 00 00 b9 00 fe 27 00 30: 49 00 00 00 00 00 6d 52 a5 a1 30 40 7c 19 cf 38 40: ca 00 32 ff 00 00 00 00
Ph Acumen LC:	00: 0d 11 22 34 2b 00 00 20 4e 00 00 00 00 00 00 10: 0b ff c1 2a 15 30 0c 5c 44 21 66 7f 65 55 28 7b 20: 04 73 79 c6 76 00 00 00 1d 00 00 93 00 fe 27 00 30: 4d 00 00 00 00 00 6d 51 a5 a1 30 40 7c 19 00 00 40: ca 00 32 ff 00 00 00 00
Ph Acumen LM:	00: 0e 12 22 34 2b 00 00 20 4e 00 00 00 00 00 00 10: 0b ff c1 2a 15 30 0d b4 44 21 66 86 26 55 28 7b 20: 04 73 76 06 76 00 00 00 1d 00 00 93 00 fe 27 00 30: 47 00 00 00 00 00 6d 52 86 a1 30 40 7c 19 00 00 40: ca 00 ae ff 00 00 00 00

**Sample of the
NVM Contents Page
(page 3 of 3)**

Cartridges Acumen Dump	
Cart Acumen K:	00: 08 00 42 34 2c 00 03 00 00 00 00 00 4f aa 5d 33 10: 97 2a 65 cc 0b ff c4 28 15 d1 83 21 09 c1 33 12 20: 14 34 39 00 00 00 00 00 26 00 61 40 00 00 00 1f 30: ff cb 03 00 00 b5 a0 43 2a 41 00 00 00 00 00 00 40: 00 00 be ff 00 00 00 00
Cart Acumen C:	00: 0d 01 02 34 2c 00 07 00 00 00 00 00 4f aa 5d 33 10: 97 2a 65 cc 0b ff e9 28 15 ab d5 b5 00 81 33 07 20: 64 34 39 00 00 00 00 00 26 00 45 10 00 00 00 1f 30: ff cb 03 00 00 b5 a0 43 c8 1a 00 00 00 00 00 00 40: 00 00 3d ff 00 00 00 00
Cart Acumen M:	00: 0e 02 02 34 2c 00 07 00 00 00 00 00 4f aa 5d 33 10: 97 2a 65 cc 0b ff e9 28 15 ab d5 b5 00 81 33 07 20: 64 34 39 00 00 00 00 00 26 00 45 10 00 00 00 1f 30: ff cb 03 00 00 b5 a0 43 c8 1a 00 00 00 00 00 00 40: 00 00 41 ff 00 00 00 00
Cart Acumen V:	00: 0f 03 02 34 2c 00 01 00 00 00 00 00 4f aa 5d 33 10: 97 2a 65 cc 0b ff e9 28 15 53 00 f9 84 81 33 12 20: 14 34 39 00 00 00 00 00 26 00 61 28 00 00 00 1f 30: ff cb 03 00 00 b5 a0 43 94 e4 00 00 00 00 00 00 40: 00 00 41 ff 00 00 00 00
Cart Acumen LC:	00: 08 01 22 34 2c 00 00 00 00 00 00 00 4f aa 5d 33 10: 97 2a 65 cc 0b ff c4 28 15 8a 39 55 09 c1 33 12 20: 14 34 39 00 00 00 00 00 26 00 61 40 00 00 00 1f 30: ff cb 03 00 00 b5 a0 43 e7 67 00 00 00 00 00 00 40: 00 00 4a ff 00 00 00 00
Cart Acumen LM:	00: 0a 02 22 34 2c 00 00 00 00 00 00 00 4f aa 5d 33 10: 97 2a 65 cc 0b ff c4 28 15 8a 39 55 09 c1 33 12 20: 14 34 39 00 00 00 00 00 26 00 61 40 00 00 00 1f 30: ff cb 03 00 00 b5 a0 43 fe e3 00 00 00 00 00 00 40: 00 00 07 ff 00 00 00 00